
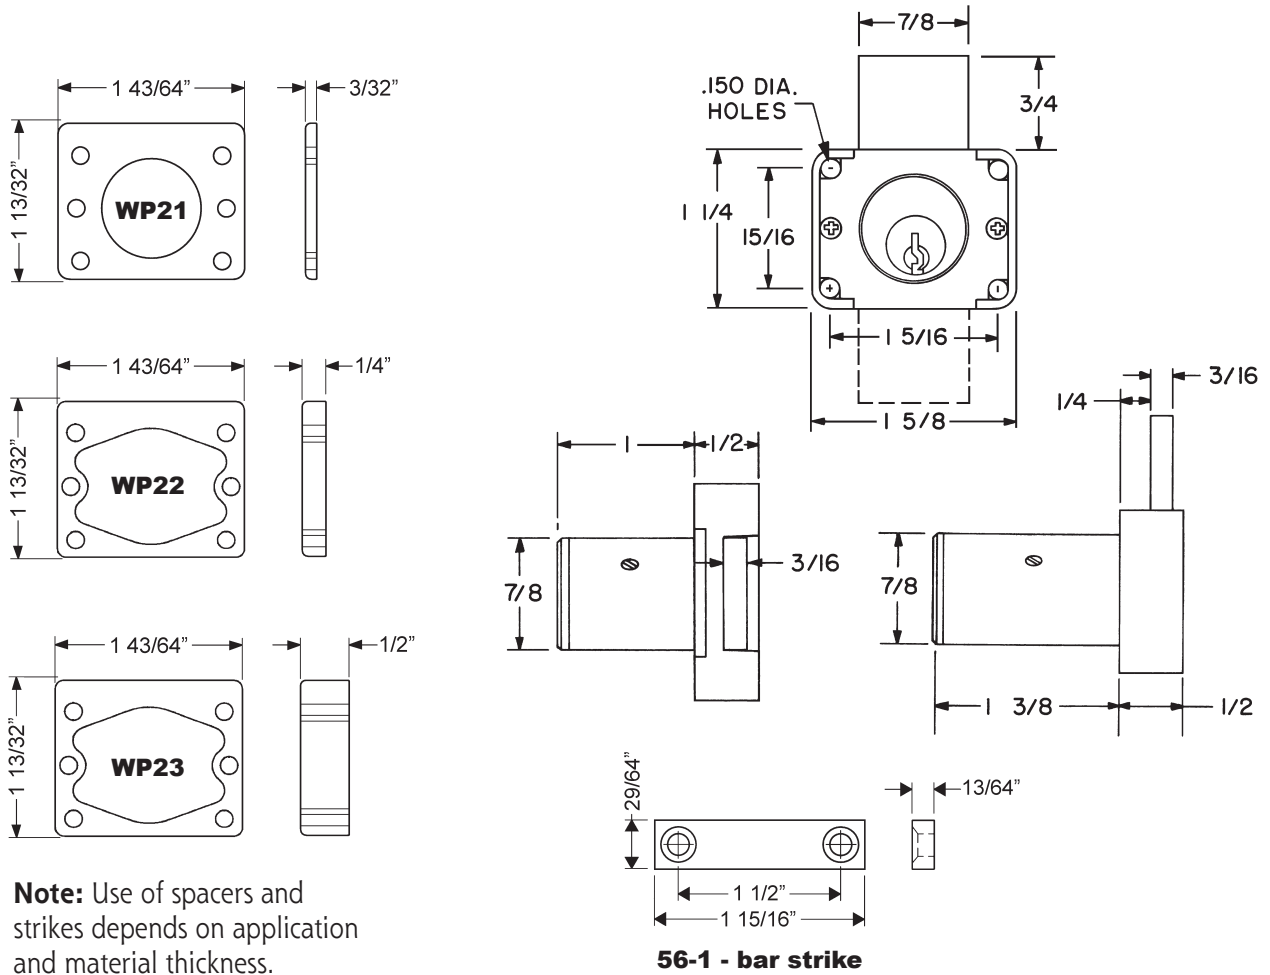


Installation Instructions

200M

Typical Installation

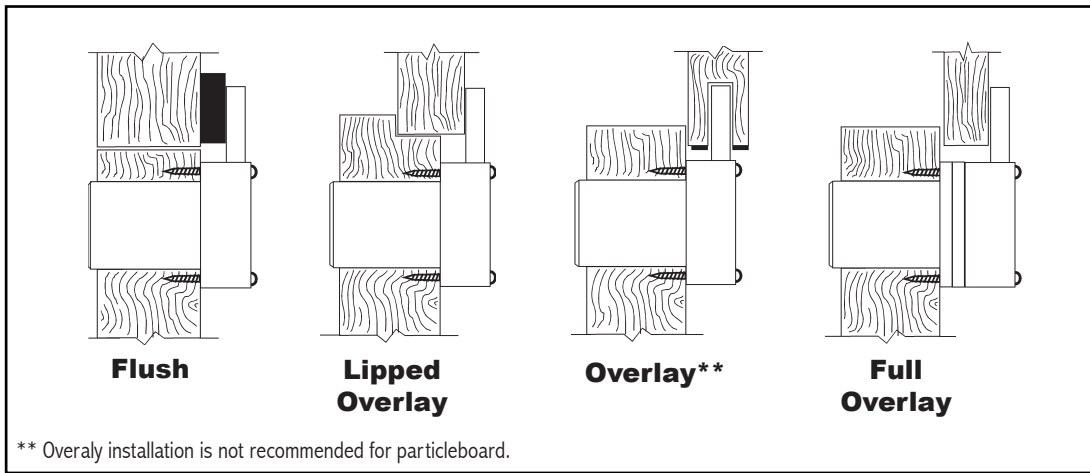

Note: Use of spacers and strikes depends on application and material thickness.

Title Installation instructions for 200M series cabinet door lock				
Series 200M	Barrel Length 7/8" or 1-3/8"	Bolt type Deadbolt	Mounting Surface	Revision Date 11/2013

